


Bearing Greasing Instructions

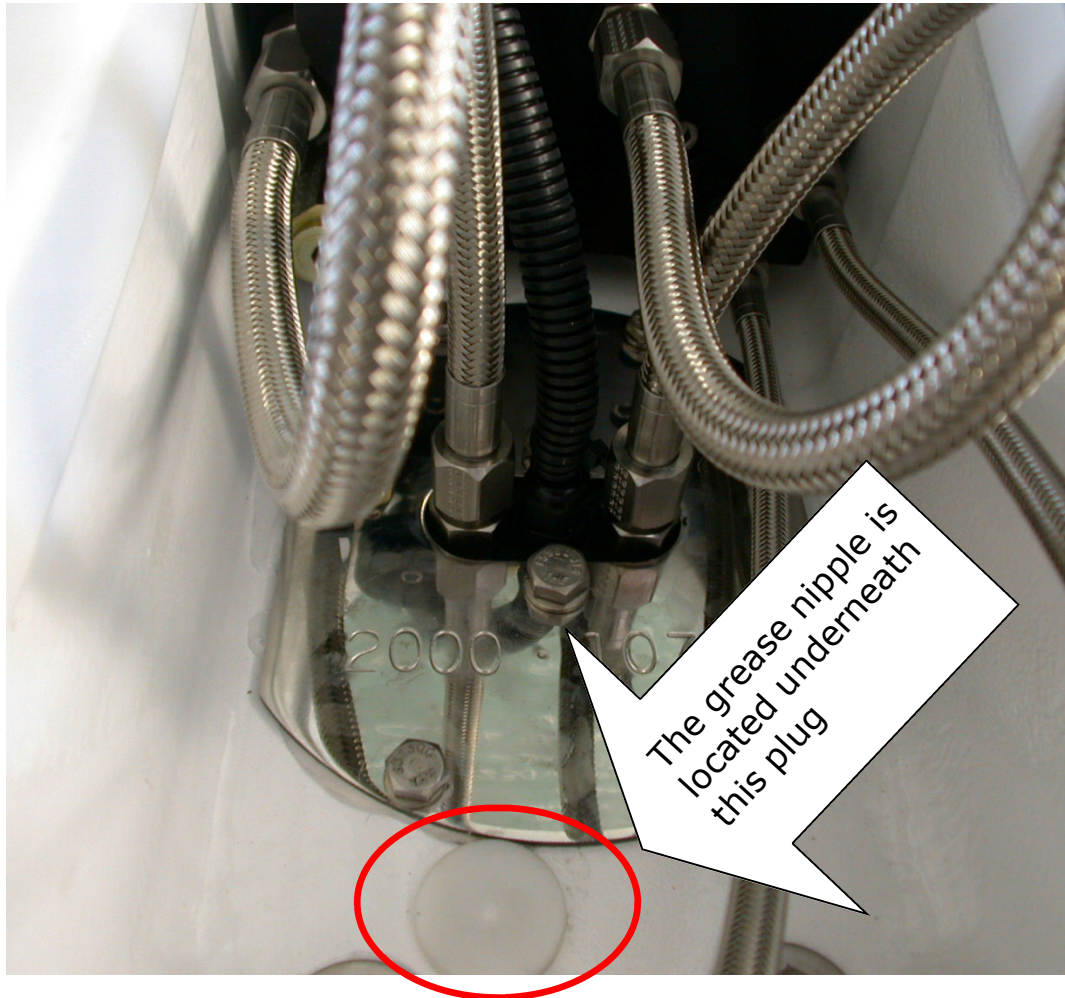

The main bearing of your yacht crane (SM1500 and larger) needs to be greased thoroughly **every 3 months** to prevent corrosion.

1. Raise the boom of your crane until you can access the inside of the truck.
2. Look for the serial number plate, you will find a 3/4" diameter plastic plug directly in front of it.
3. Pry out this plug, underneath you will see a grease nipple.
4. **Using waterproof high pressure grease**, insert about 5 shots into the bearing.
5. Rotate the crane 90 degrees and insert another 5 shots, repeat twice more so that you have greased the bearing at four spaced points.
6. Replace the plastic plug.
7. Exercise the crane thoroughly in the rotation function to evenly distribute the grease.
8. Repeat again in 3 months.